


Hot-Swappable  
**BLMS**  
 Bloody Mechanical Switch



► **PACKAGE CONTENTS**

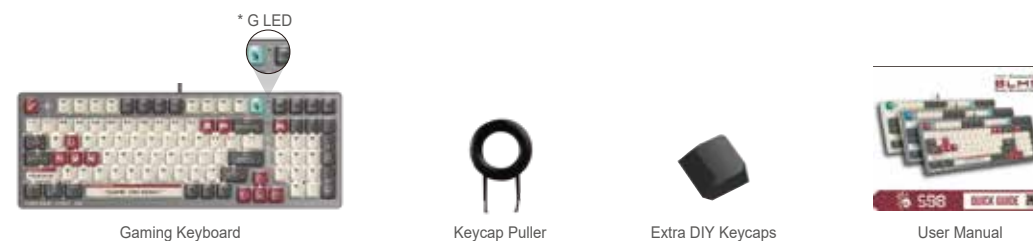

► **INSTALLATION**

**CONNECTION**


 
Plug the USB cable to the computer USB port.  
 (Note: Use a USB hub or extension cable to connect is not recommended.)

**SOFTWARE DOWNLOAD**



For the best product performance, please download and install the Software from  
<http://bloody.com/en/download.php>.

► **COMBINATION FN KEYS**

DEFAULT 10 PRESET LIGHTING EFFECTS

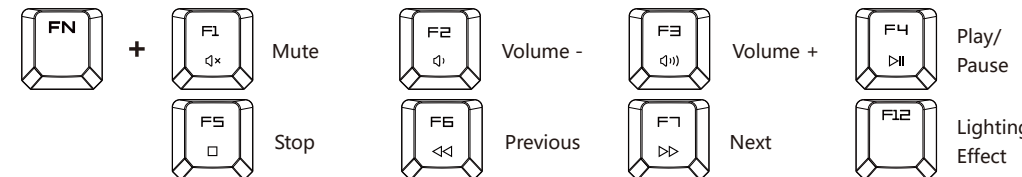


7 Macro Profiles Mangement

  


► **SWAP SWITCH STEP**

**HOW TO REPLACE SWITCHES?**


The keyboard switches are hot-swappable and compatible with most the 3-pin & 5-pin mechanical switches on the market.  
 Extra switches are not included in the package.

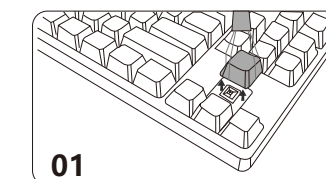


**01**  
 Remove the keycaps with the keycap puller.

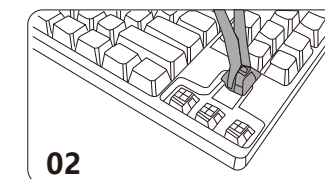


**02**  
 Remove the switches with the switch puller.

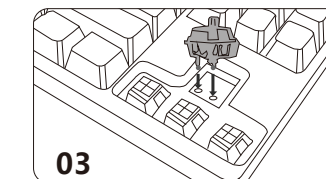


**03**  
 Line up the switch pins with the PCB socket.

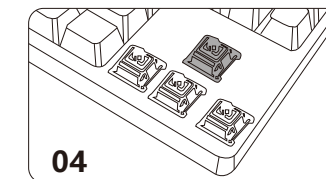

**04**  
 Place the switch on the PCB and integrate it closely.

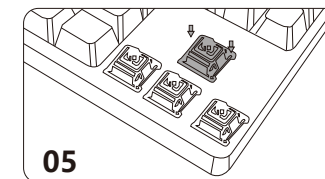

**05**  
 Gently press the switch into place.

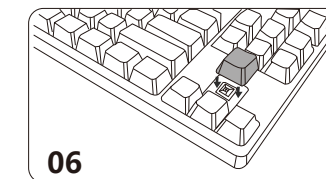

**06**  
 Put the keycaps back on to the keyboard and test it.



**598**

**QUICK GUIDE**



www.bloody.com